



Soda Gun Jetter Smart controller setup guide

Contents

Menu navigation – Devices

Menu navigation - Templates

Menu navigation - Settings

 
Update firmware

Taste 
Symbol

Say Soda Gun Jetter and Be Sure

Menu navigation- Device

Search for new devices

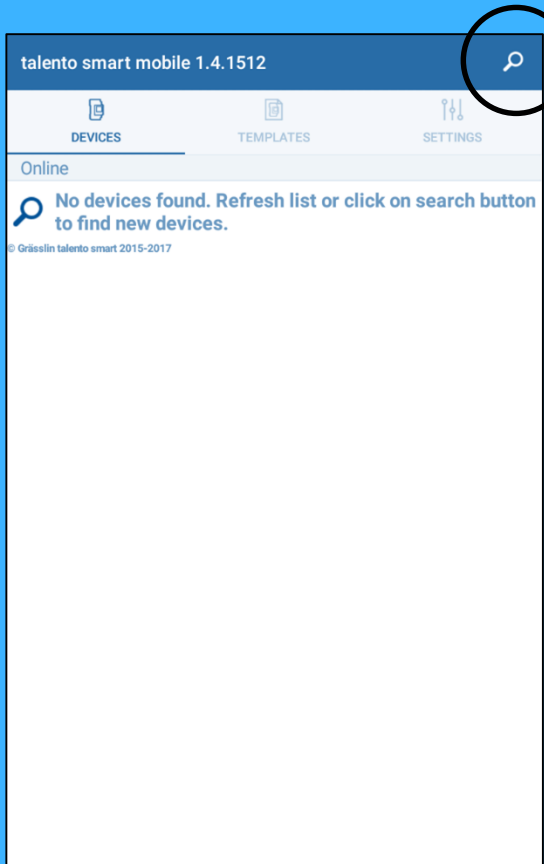

Search for available devices by tapping the magnifying glass



Search for Devices



Timer synchronized



 
Timer needs to be synchronized



Erase device

Devices

Overview of the symbols

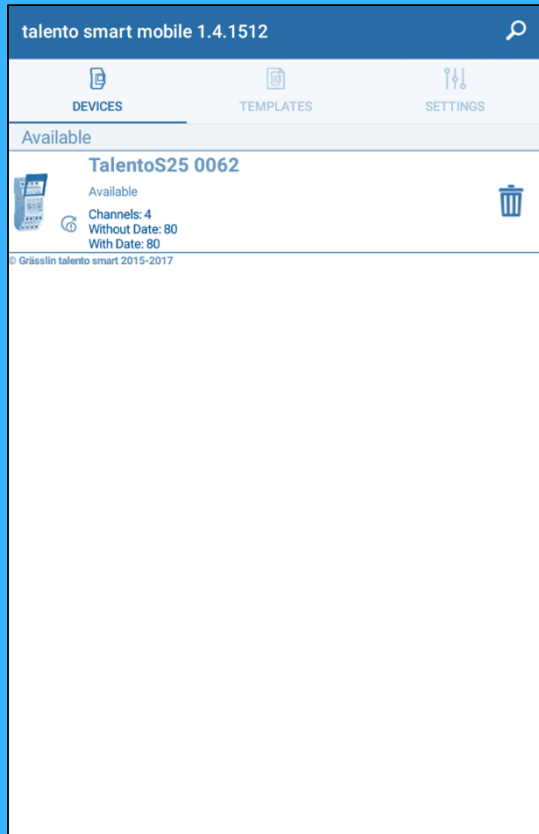

Select an available timer to get to the manual control.



Device is connected



Device is disconnected



Settings



Timer needs to be synchronized



Timer synchronized



Schedule



Table



Auto mode



Override



 
Fix on



Fix off

Devices

Overview of programs and functions

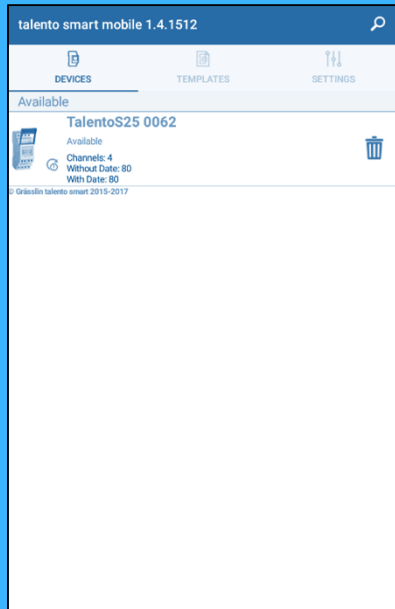


Here you will see all the information regarding the timer.

Tap here to see and adjust timer programs.


Buttons for manual control / override of timer circuits.

Devices

 
Change of settings

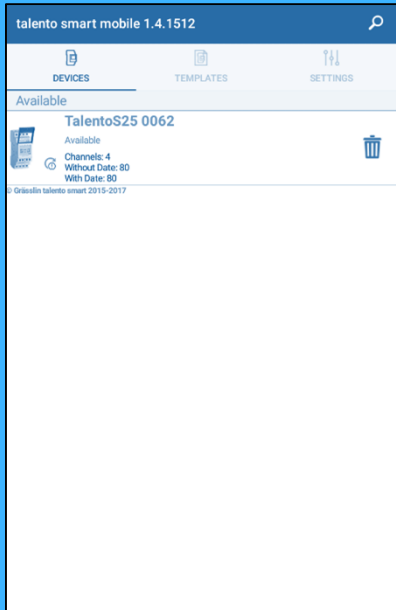

 Tap the gear symbol to access timer settings.


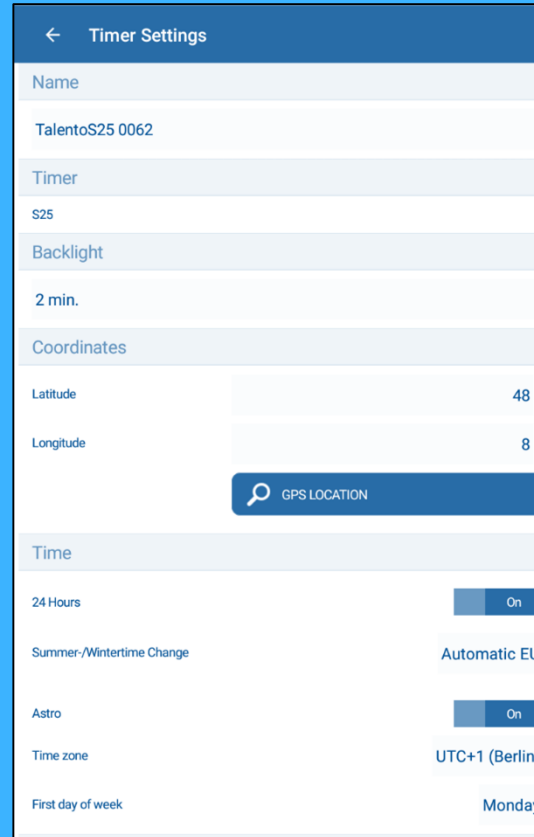


 This gives you access to name / rename timers and channels, set latitude / longitude coordinates, time zone, etc..

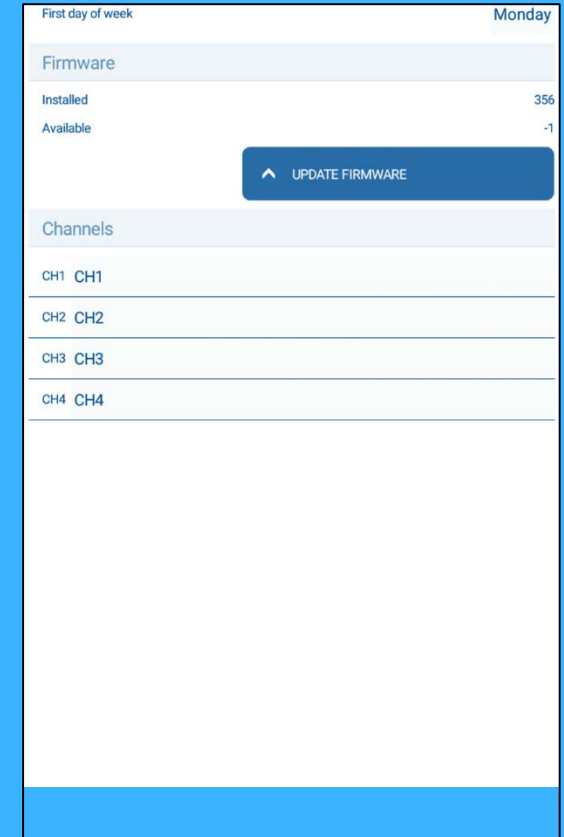


Devices

  Synchronization

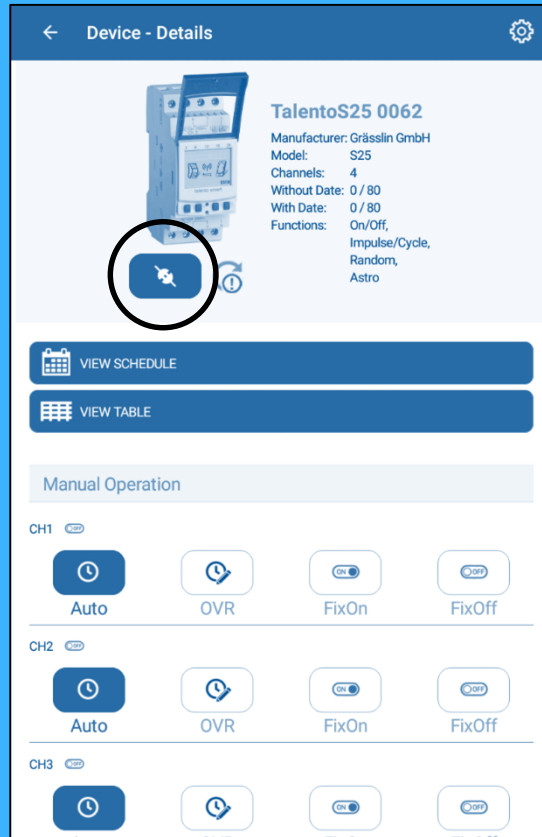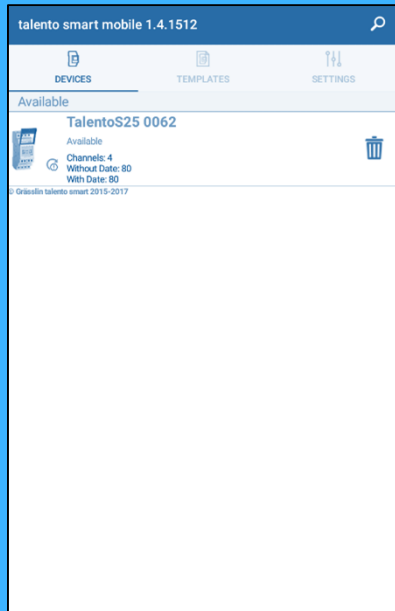

 Tap the connection button to access the synchronization menu.

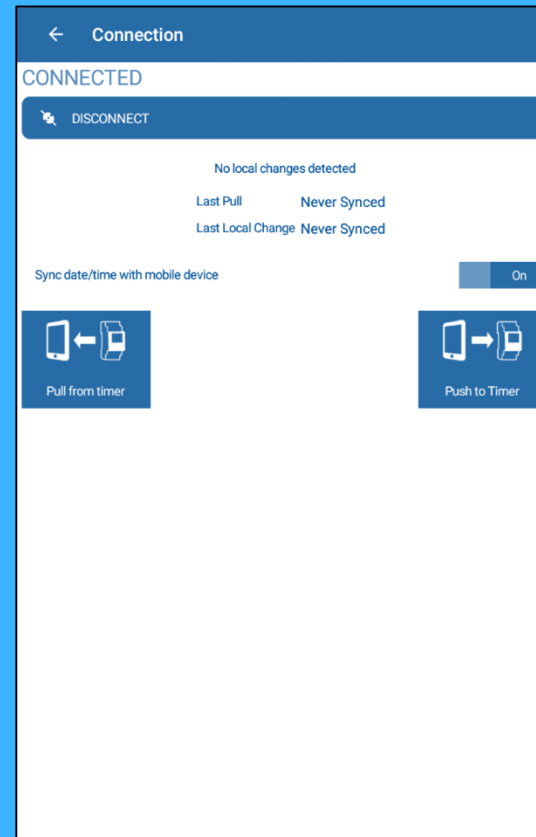


Tap on Pull From Timer to load the schedule from the timer.



Device is connected



 Device is disconnected

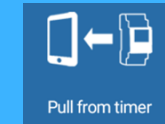



Pull program from the time switch




Send program to the time switch

Devices

  
Schedule

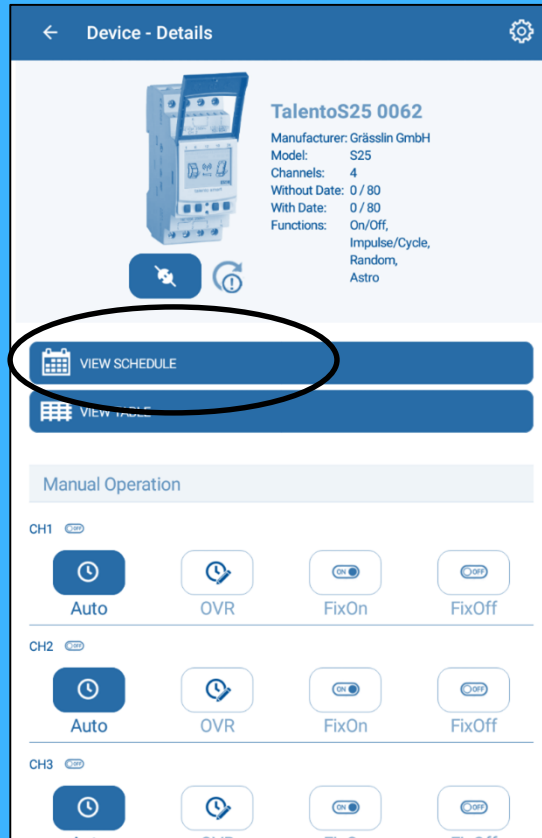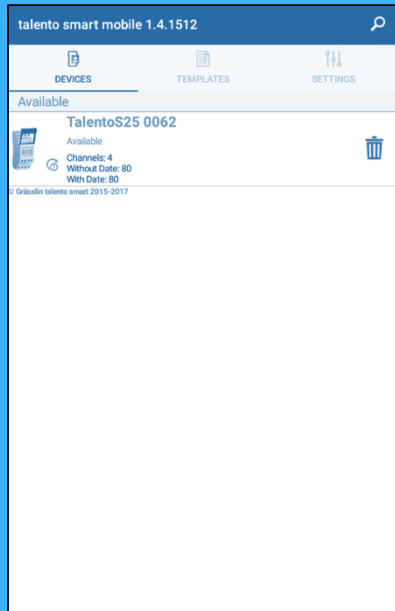

 Tap the View Schedule bar to see the timer schedule.

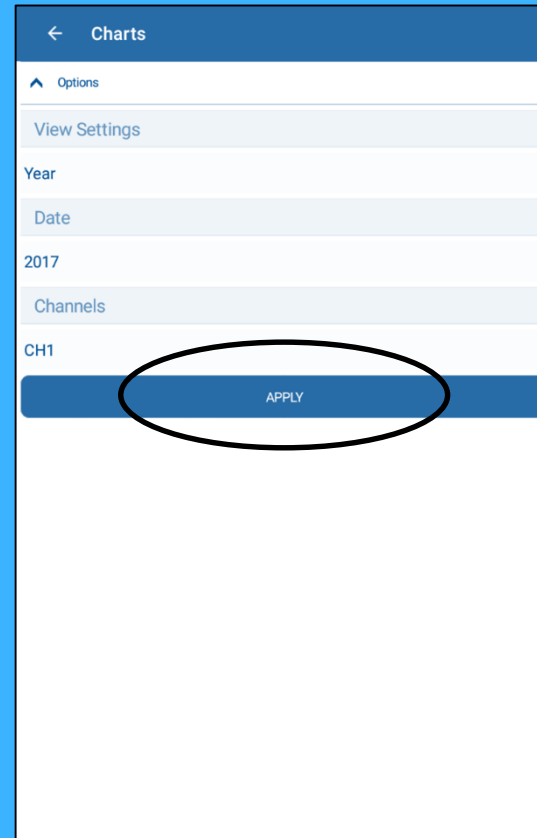


 
Tap on the parameter you want to see, then tap on Apply to confirm your choice.

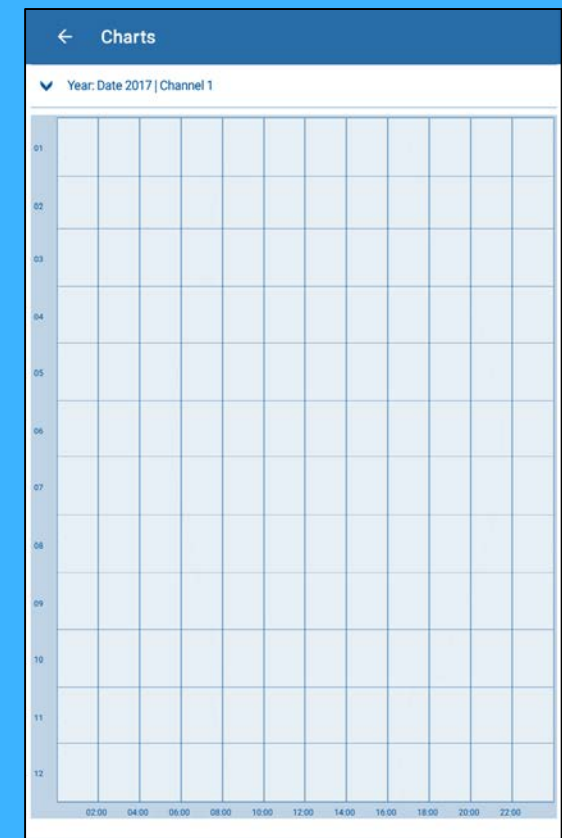


A graph of selected information will be displayed.

Devices

  
Time table – create new program

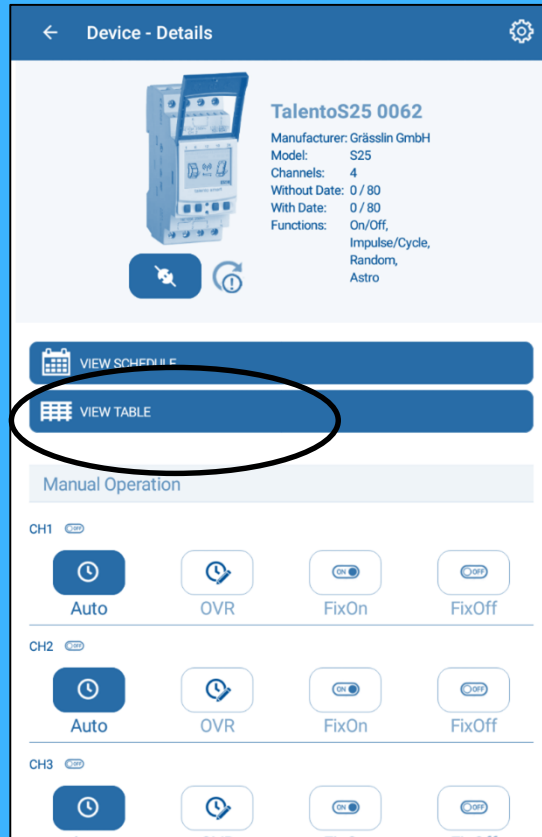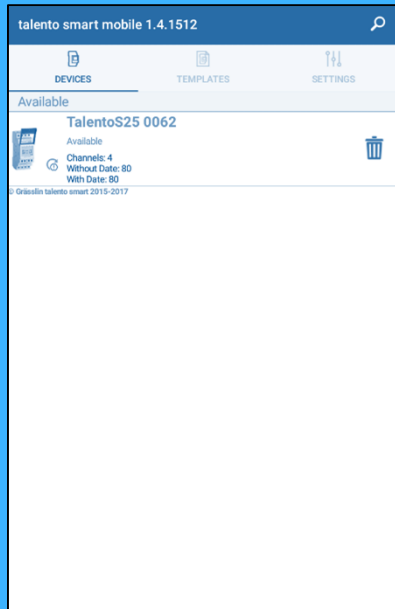

 Tap on View Table to access the program schedule. Here you can add programs and events.

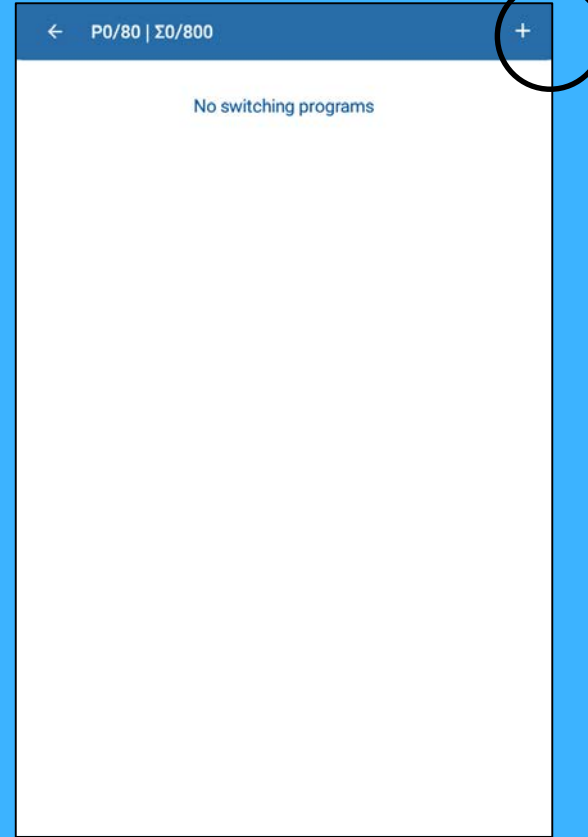

To create a new program tap on +.

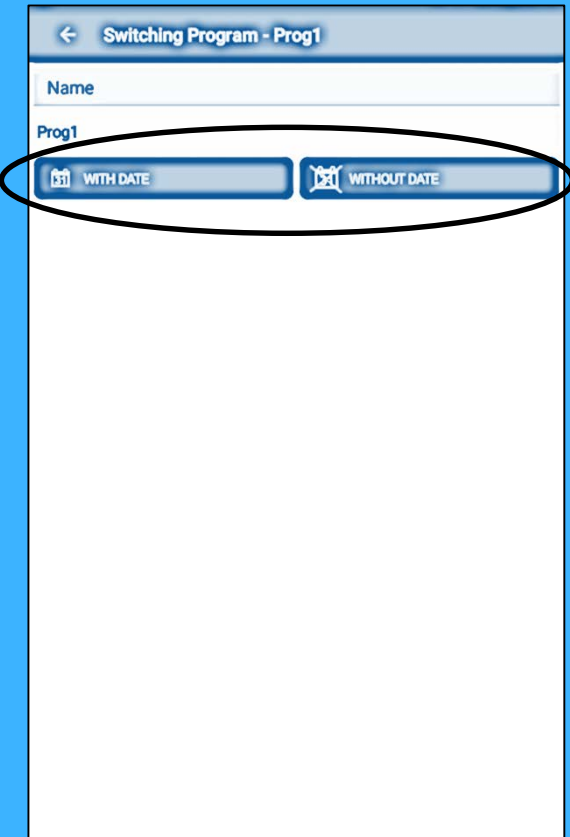 

Program can be named / renamed. The select with date for holiday settings or without date for regular schedule event.

Holiday function is not used but included if needed

Time table – create new program



| Start | End | Date |
|-------|-----|------|
| 25 | 10 | 2017 |

Enter your holiday date range.

United Kingdom

ALL FIXED FLOATING




- New Year's Day (01.01.****)
- Good Friday (14.04.2017)
- Easter Sunday (16.04.2017)
- Easter Monday (17.04.2017)
- May Day Bank Holiday (01.05.2017)
- Spring Bank Holiday (29.05.2017)
- Summer Bank Holiday (28.08.2017)
- Christmas Day (25.12.****)

Select Holidays to choose from preset holiday dates. Tap the disk icon to save and exit or the icon with the plus symbol to save and add another holiday. Notification at the top of the screen will indicate when the holiday is saved.

Holidays added



Last Update

| Start | End | Date |
|-------|-----|------|
| 25 | 10 | 2017 |

-  Save + add more data
-  Save + end
-  Select holidays

Devices

  Time table - overview

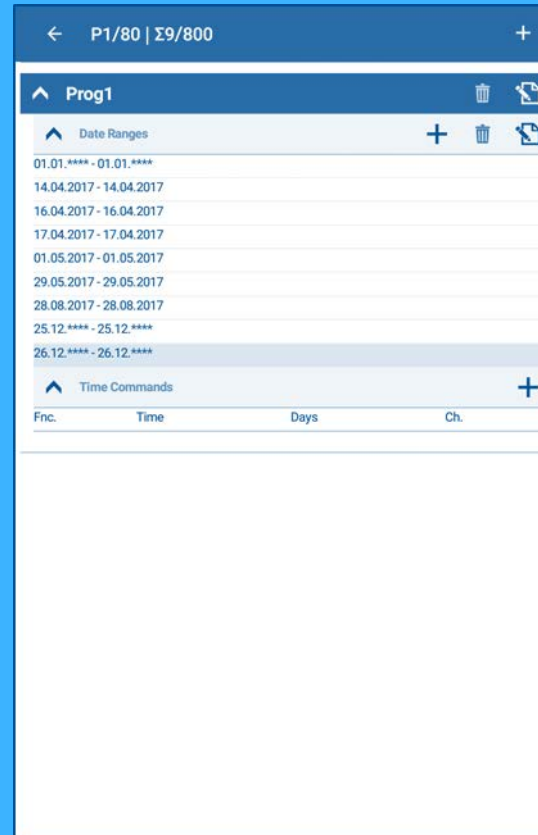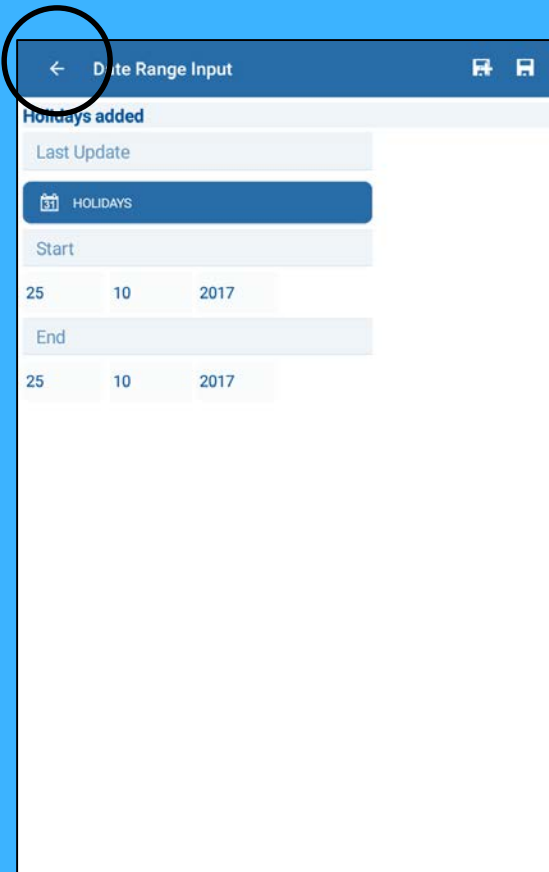


Overview of
Dates + date range

Overview of
Time commands


 Go back

 Close detailed view

 Open detailed view

 Add program, date
range or time
command

 
 Change settings

 Erase data


Tapping the back arrow will take you back to the time table.

Devices

Time table – Adjust program priority / rename program

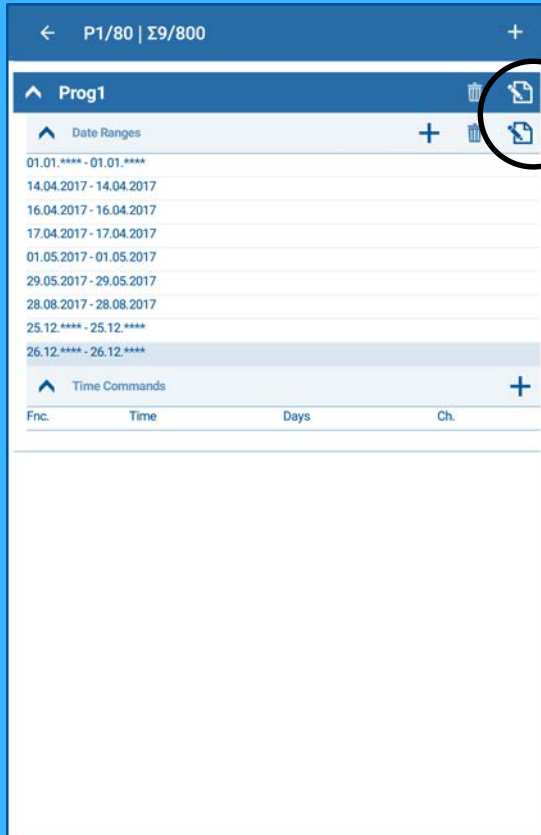

 
Tap on the change setting icon to edit program information.

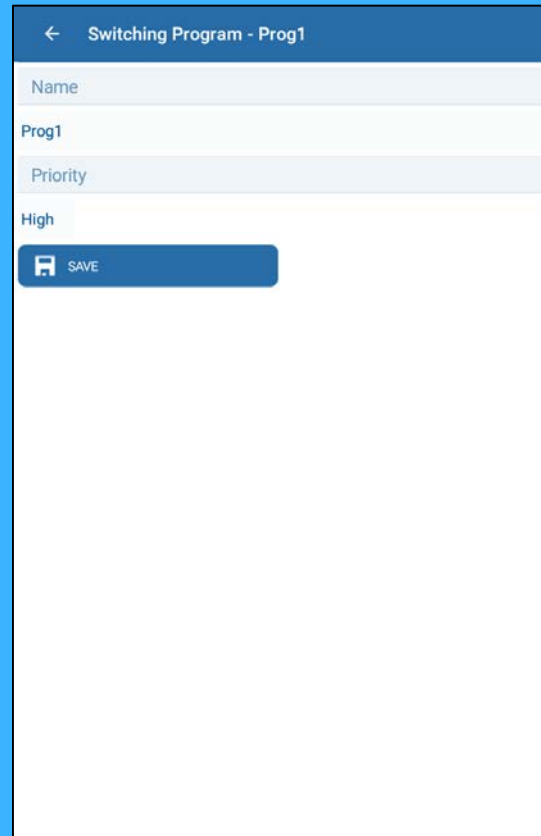


You can change the program name or adjust the priority. Tap the save icon to save your change.

Devices

  Time table – add time command - functions

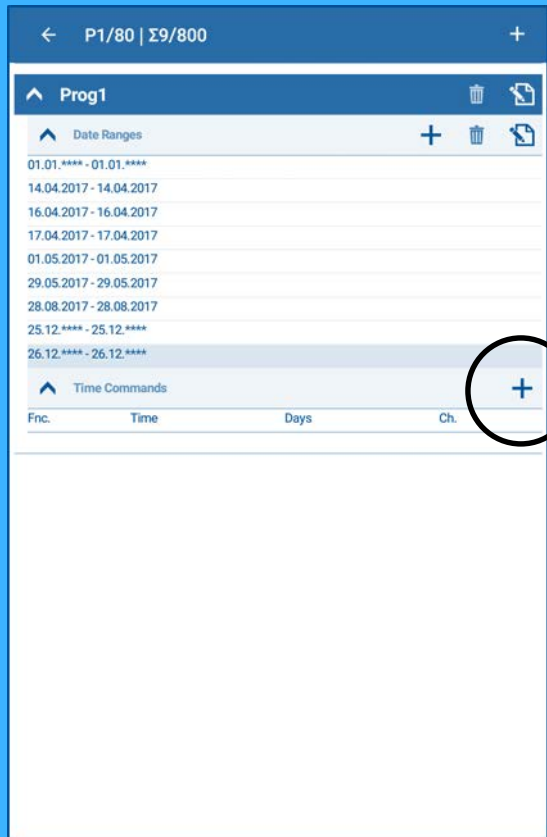



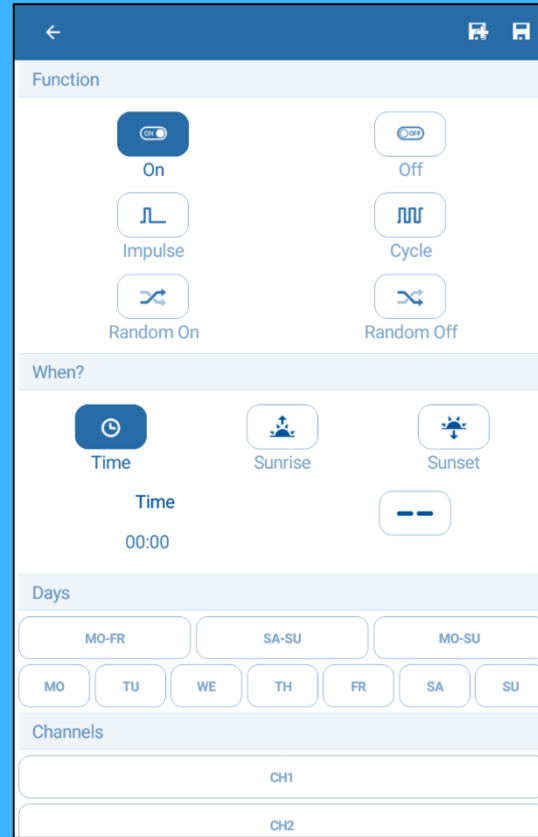



Tap on the (+) button to add an event.



 
Tap on the appropriate function for this event.

Functions


-  On command
-  Off command
-  Pulse command
-  Cycle command (multiple pulse)
-  Random on command
-  Random off command

Devices

Time table – add time command – times / astro

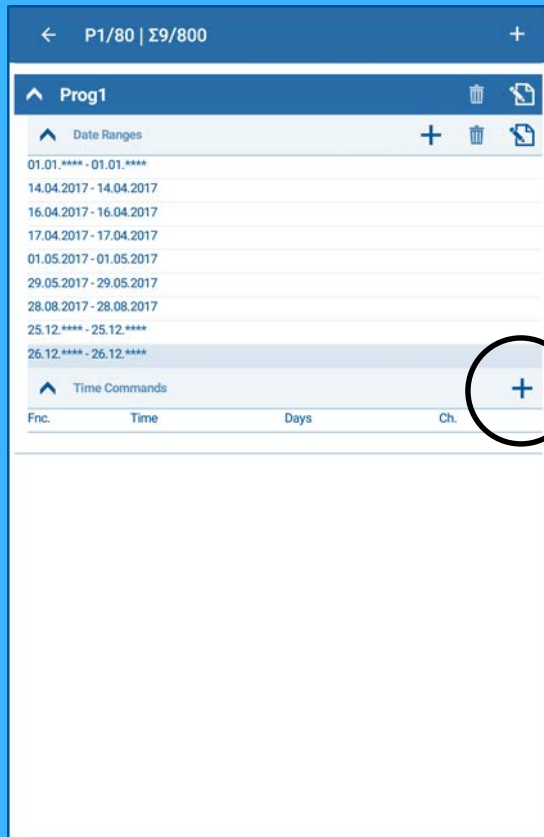

 Tap on the (+) button to add an event time.

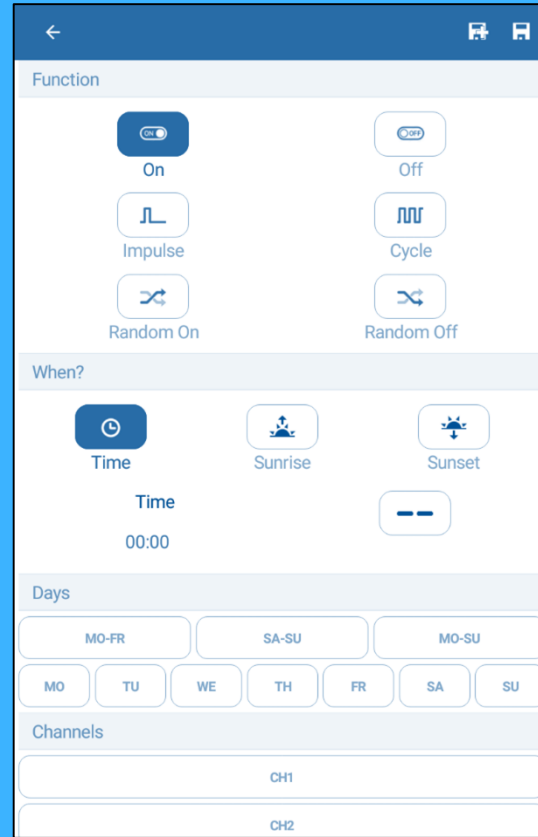

Tap Time (specific time), Sunrise or Sunset to set the timing of the event.

Time selection
+ astro



Sunrise



Sunset



Open Nightbreak-menu



If set time is BEFORE
SUNRISE



If set time is AFTER
SUNRISE



 
If set time is BEFORE
SUNSET



If set time is AFTER
SUNSET

Devices

Time table – add time command – days

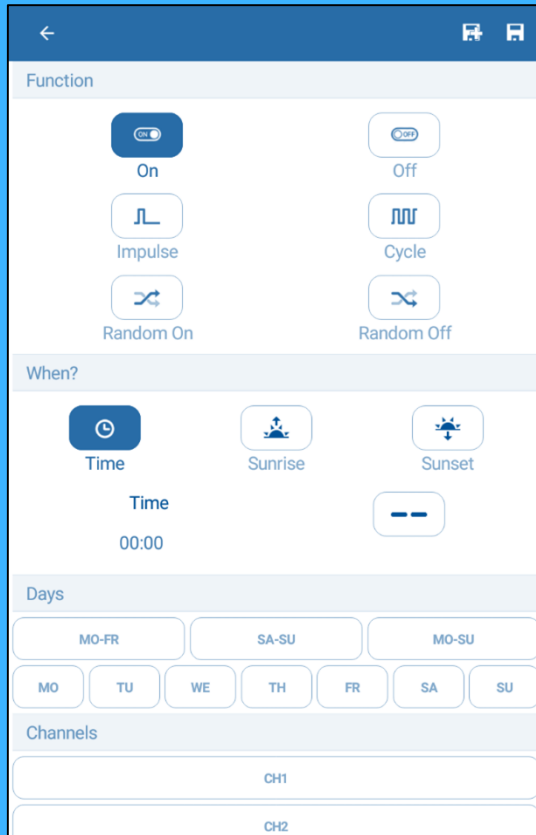


Day selection

Tap on a predefined day grouping or the individual days that this event should happen.

Devices

 Time table – add time command – channels

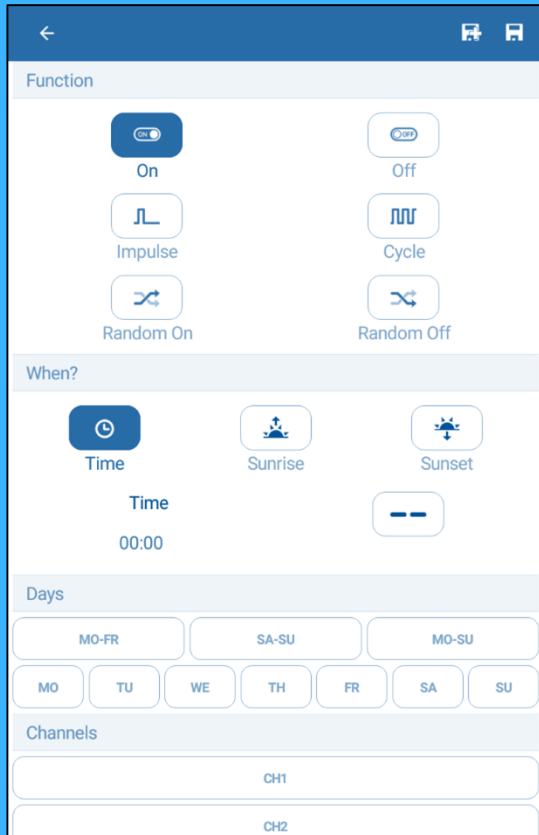

Channel selection



Save + add more data



Save + end

Tap on each channel that this event applies to. Tap the Save icon to save settings.

Menu navigation- Template

 
New template



From the main screen, tap on the Template icon to see the templates overview





Tap on the add button to create a new template.

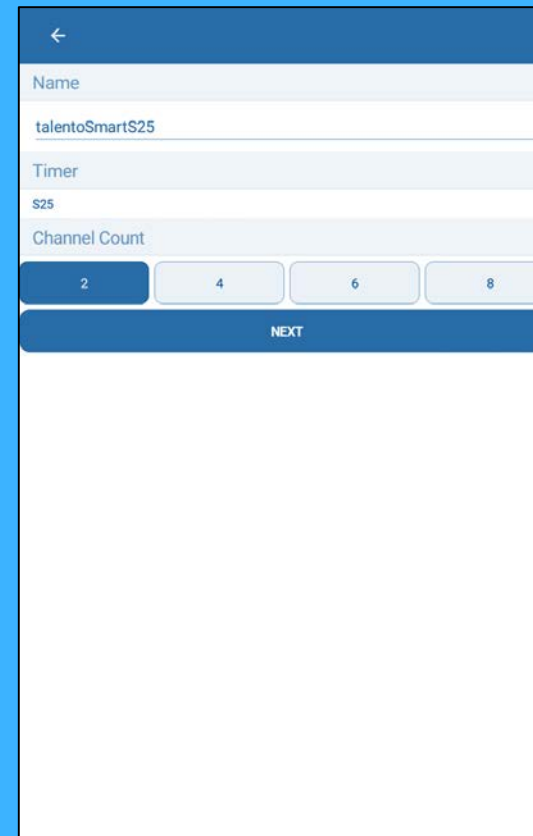

Timer and template can be renamed here. Tap on the Next button to save.


Template

  
New template

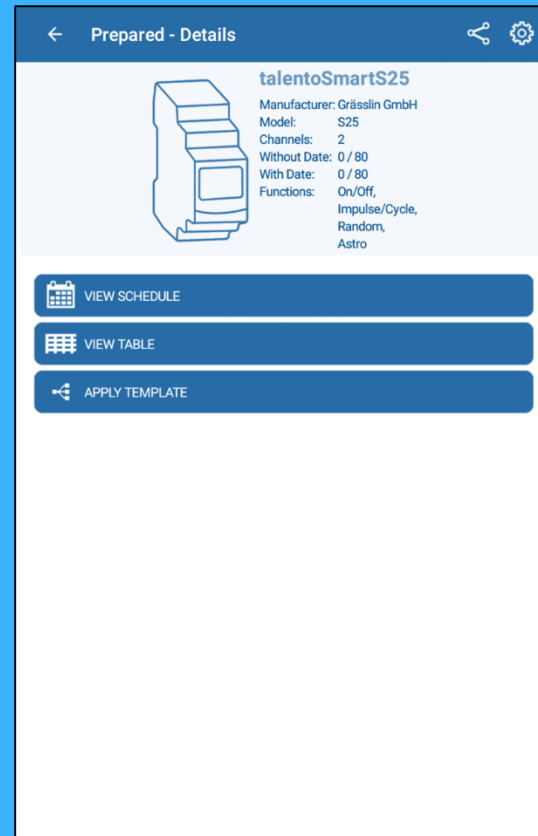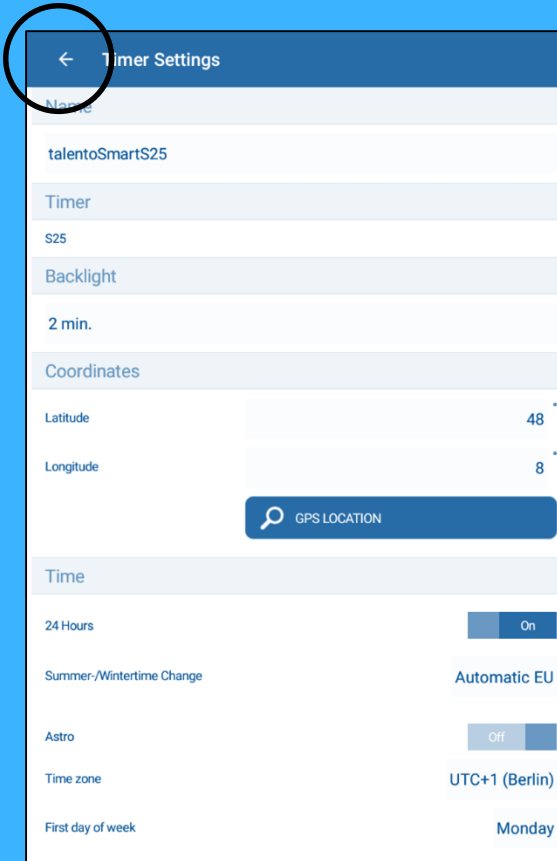

 Go back

 Share template

 Timer settings

 View schedule

 View time table

 Apply template







Timer settings can be changed, then tap the back arrow to confirm and save.

Template

New template

 
 


Tap on the share button to send the template e.g. via E-Mail.





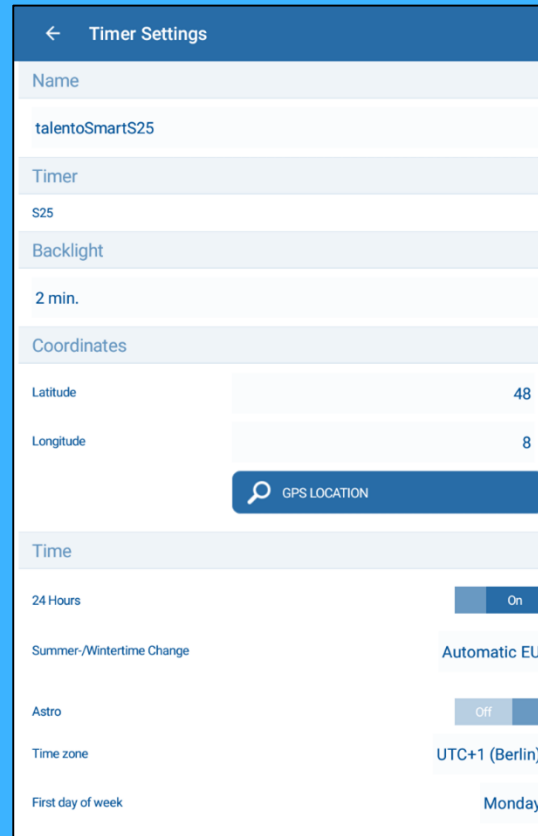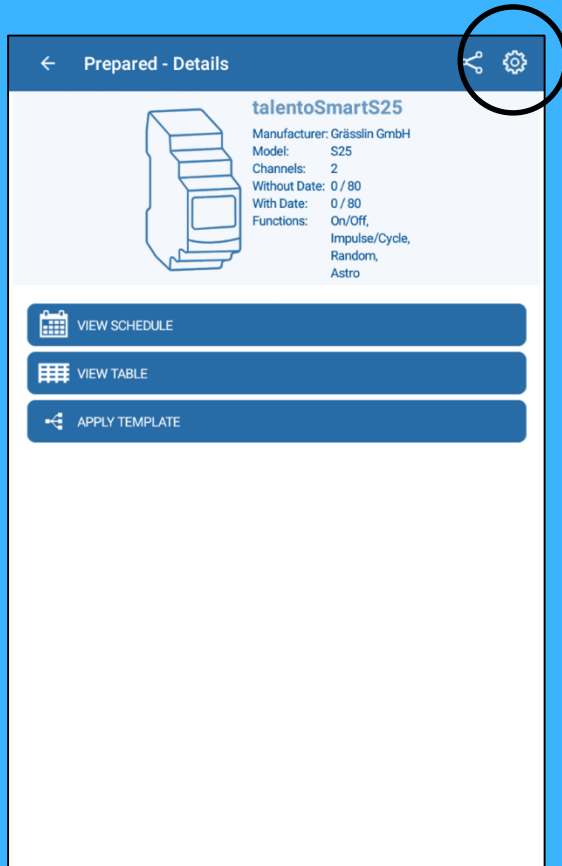

-  Go back
-  Share template
-  Timer settings
-  View schedule
-  View time table
-  Apply template

Template

New template

 


Tap on the gear symbol to access timer settings.

 
-  Go back
-  Share template
-  Timer settings
-  View schedule
-  View time table
-  Apply template

Template

 
New template

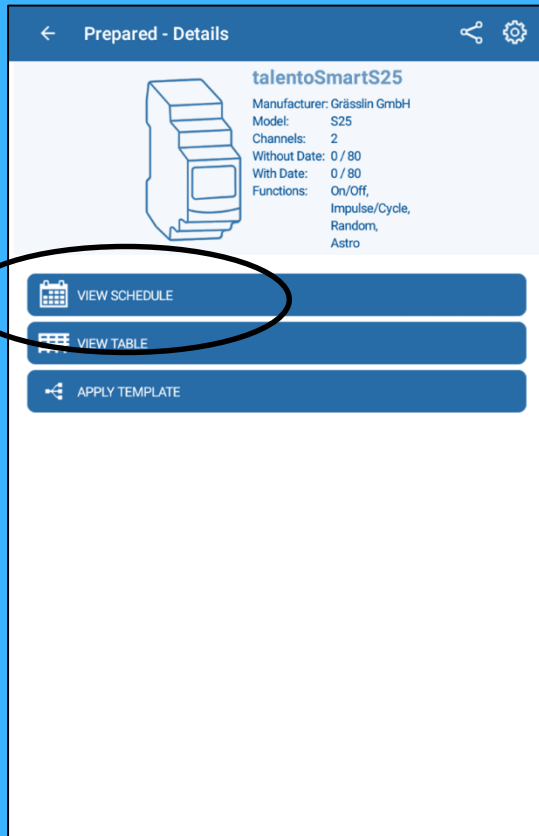


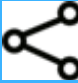


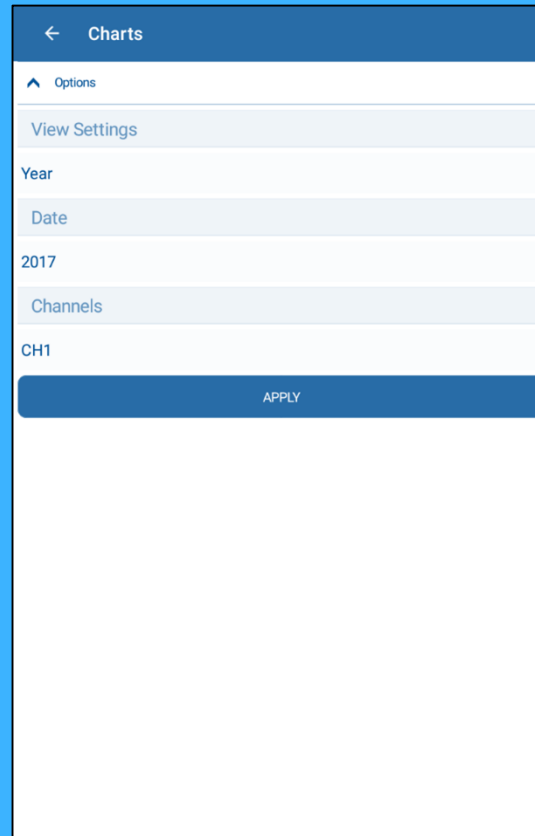

Tap on View Schedule to create a chart.

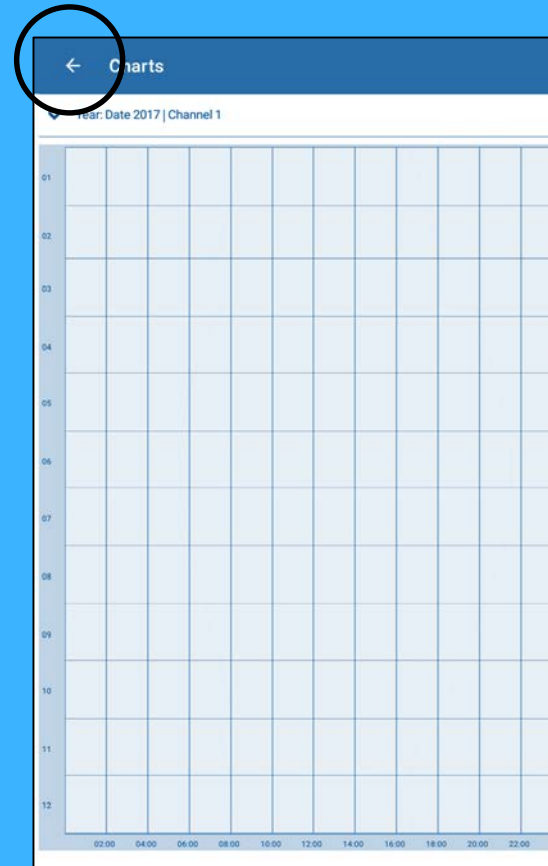

Set parameters and tap APPLY to confirm.

 
 


Tap the back arrow to return to the main screen.


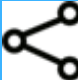





-  Go back
-  Share template
-  Timer settings
-  View schedule
-  View time table
-  Apply template

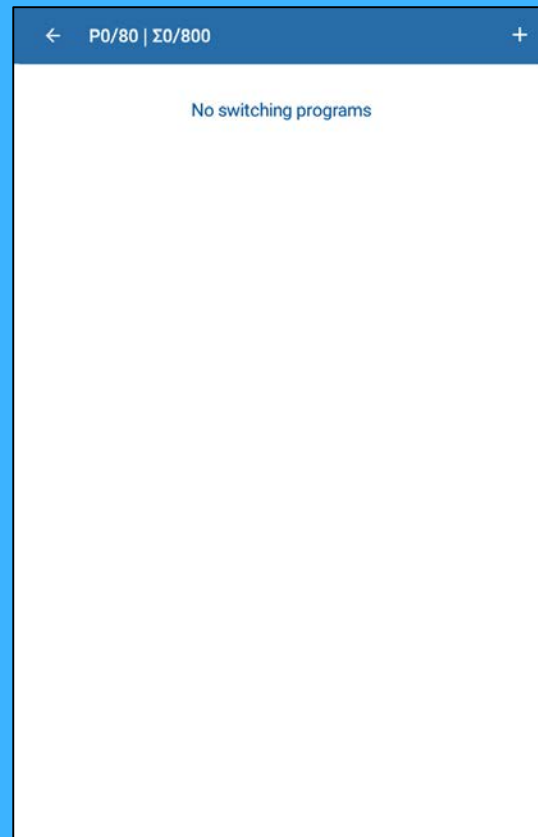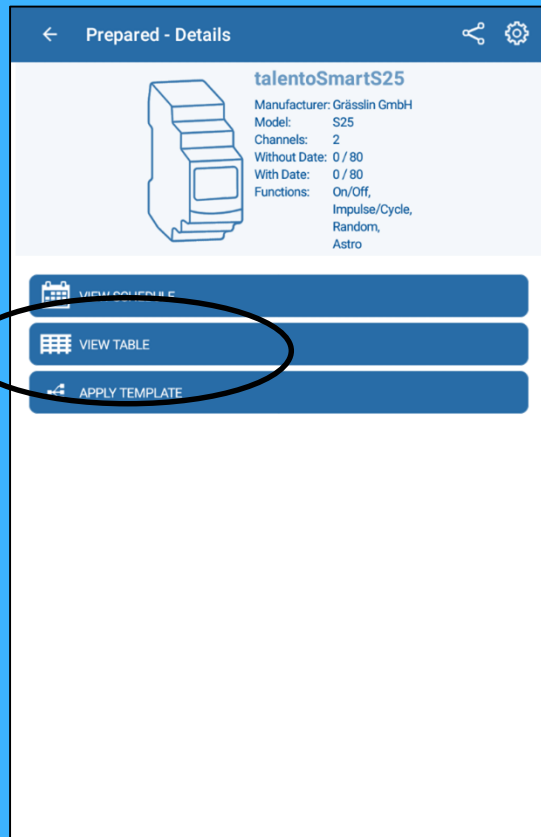Template

New template

 


Tap on the table symbol to get to the time table

 
-  Go back
-  Share template
-  Timer settings
-  View schedule
-  View time table
-  Apply template
-  Add data

Template


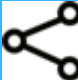


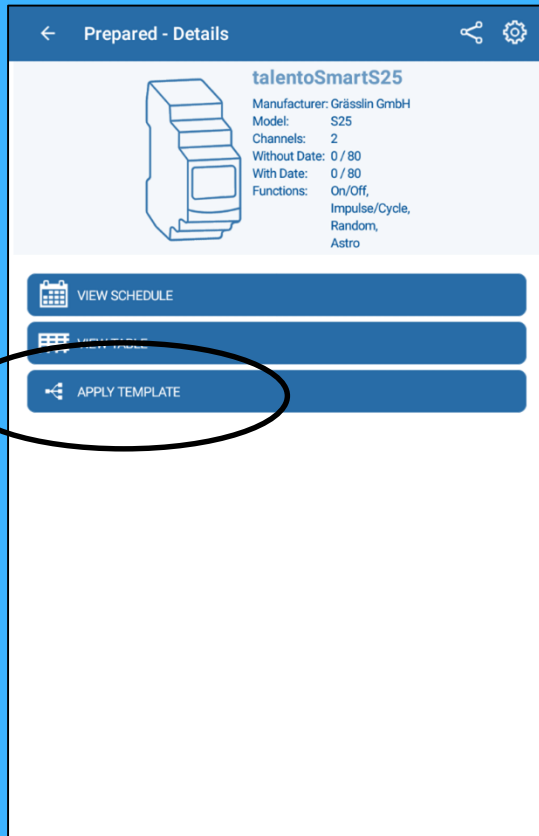

New template

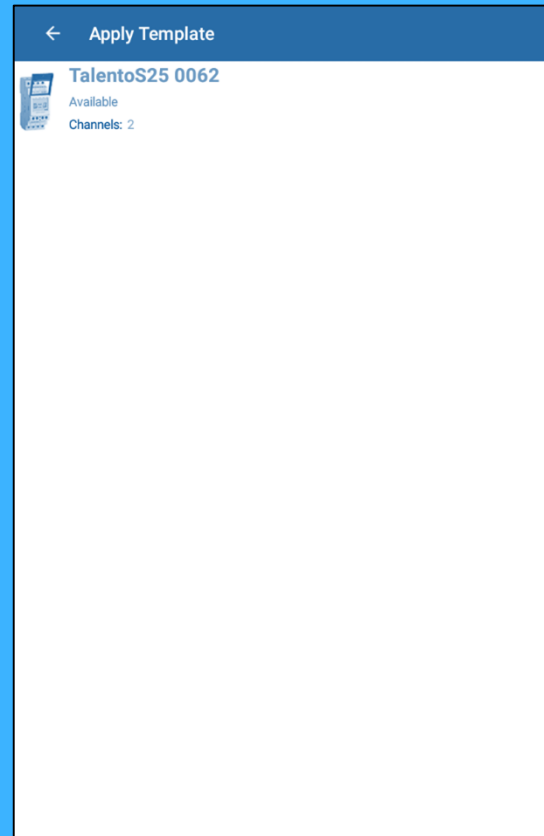

Tap Apply Template to send template to a device.



Select device to upload template.

-  Go back
-  Share template
-  Timer settings
-  View schedule
-  View time table
-  Apply template

Menu navigation- Settings

Settings



DEVICES TEMPLATES **SETTINGS**

Language

English (United States)

Bluetooth-Connection

Synchronize time when connect to timer On

Backlight

2 min.

Coordinates

Latitude 48°

Longitude 8°

GPS LOCATION

Time

24 Hours On

Summer-/Wintertime Change Automatic EU

Time zone UTC+1 (Berlin)

First day of week Monday

Colors

Color On

Color Off

Color Random

 
Background Color

Astro lines


Update Firmware

Current schedule should be saved to the app prior to firmware update. Updating will erase all existing programming in timer.

Update Firmware

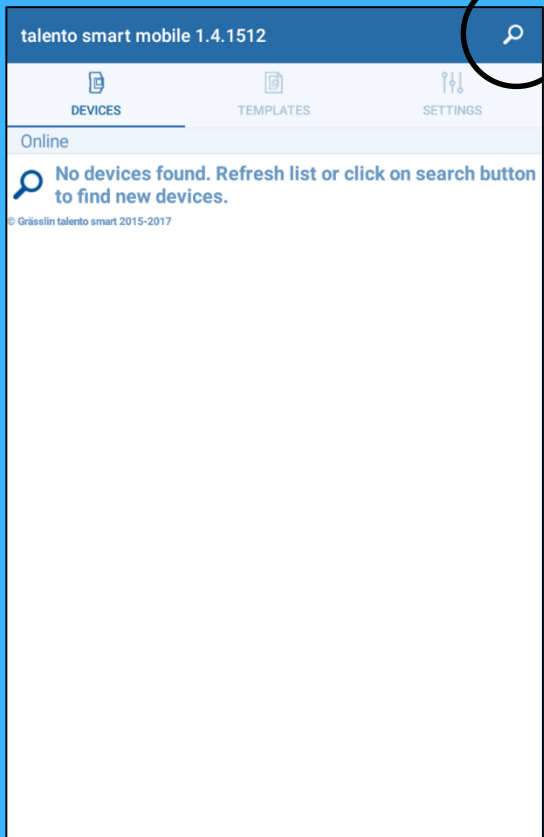

 Tap on the magnifying glass to search for available devices.

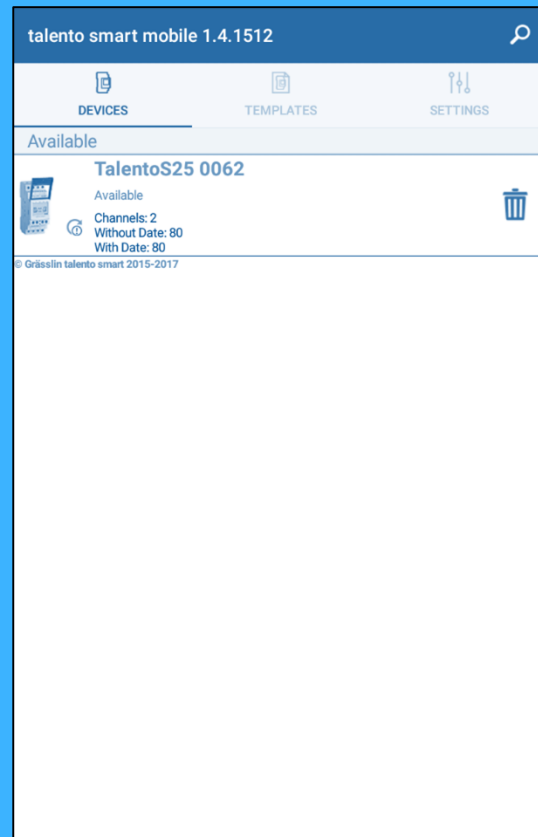


Select time switch to be updated.




Tap the gear symbol to access timer settings.

 
Update Firmware

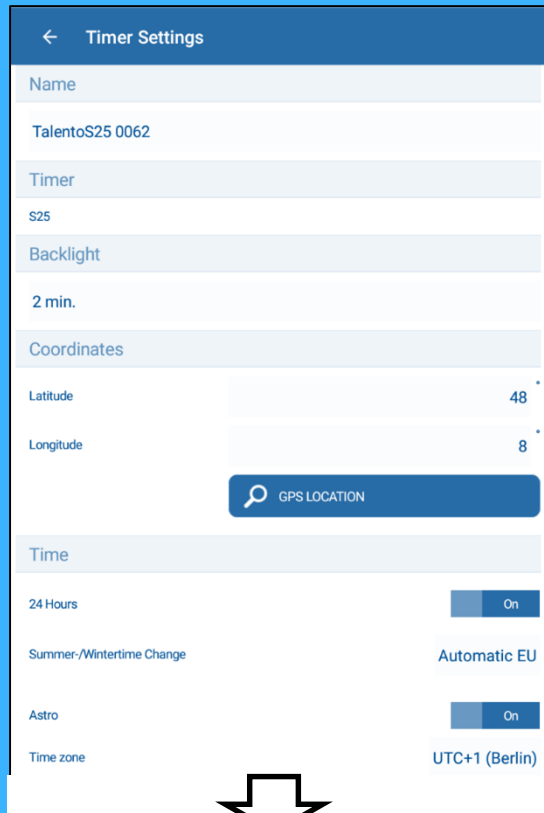

Scroll down to update firmware.

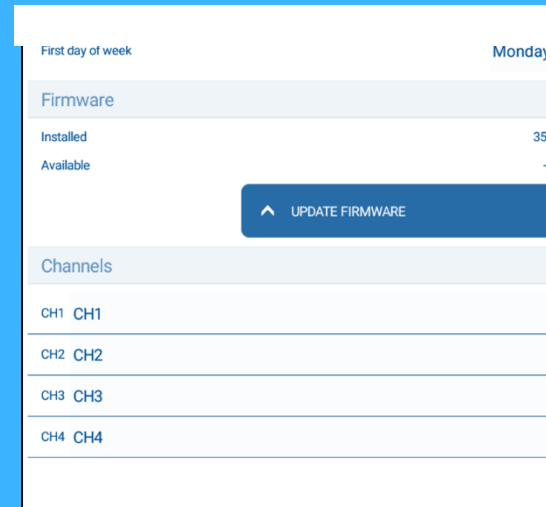 


Select Update firmware.

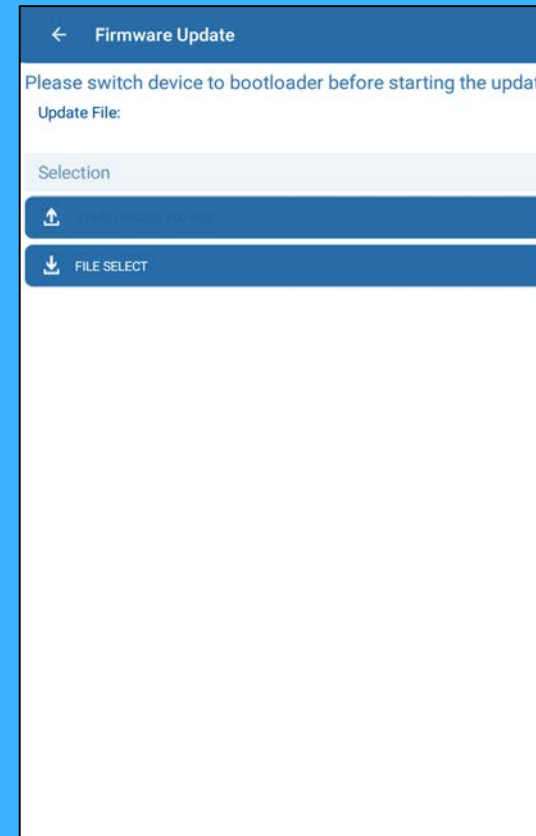 

Switch device to bootloader mode.

Update firmware

 Bootload

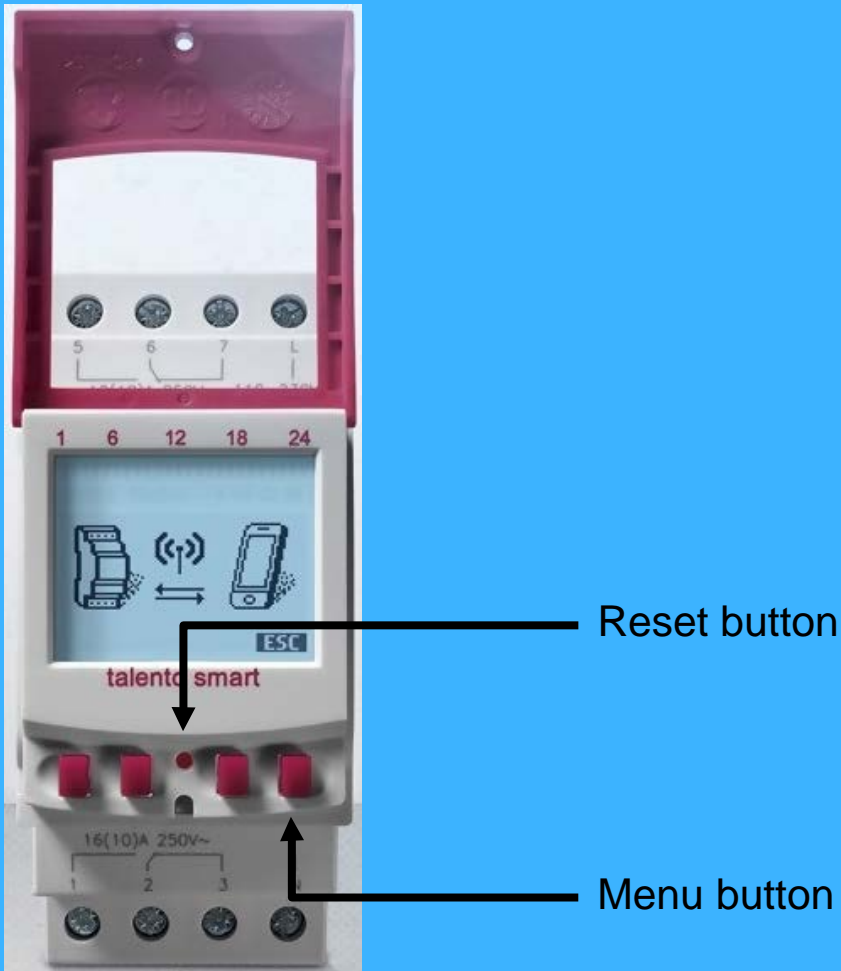

1. Step: Press and hold reset button.



2. Step: Press menu button and hold it .



3. Step: Release reset button.

 


4. Step: Release menu button.



The display should start to flash

Update Firmware

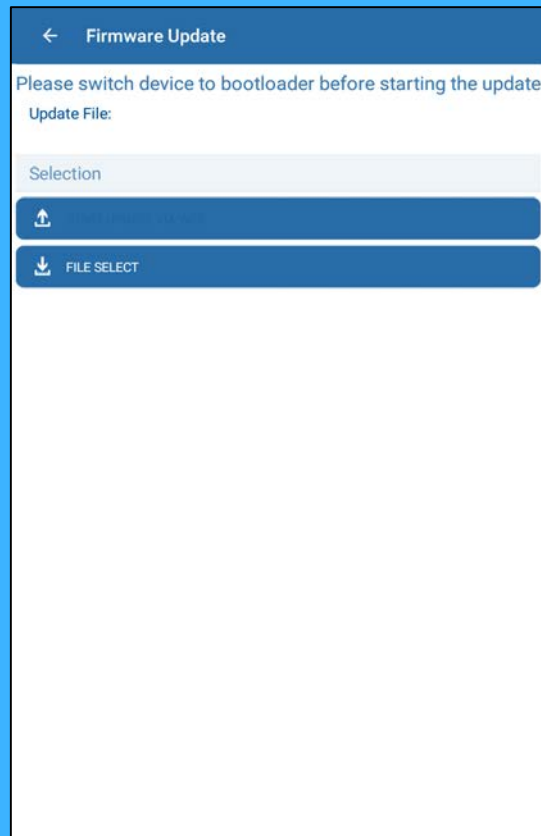

Select update from displayed files.



In case of questions please do not hesitate to contact your technical support (856) 396-7900 ext.3

